




What's in the box

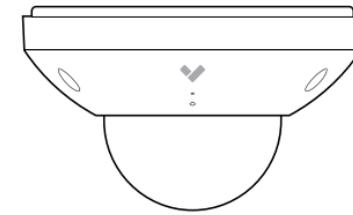

CM41-E Outdoor Mini Dome Camera

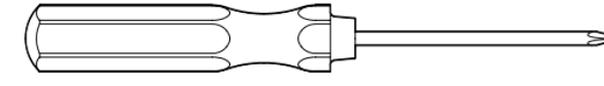

T10 Security Torx Screwdriver

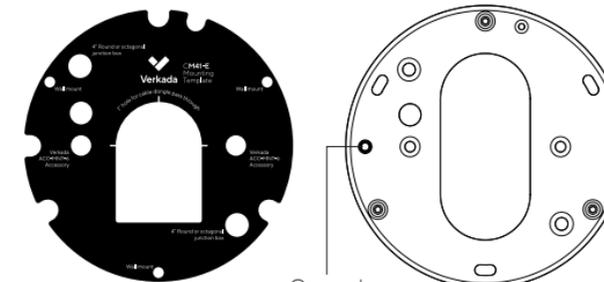

Mounting Template (Attached to camera)

Mount Plate (Attached to camera)

Grounding In order to attach a ground cable to the camera, perform the following:

- Align a 20AWG or larger grounding cable with a ring terminal and drive an M4-0.7 x 6mm screw (not included) through the terminal and into the threaded grounding point on the back of the device.
- Attach the other terminal of a grounding cable directly to a circuit breaker, ground rod or earth ground.
- This unit is powered by PoE through a UL Listed ITE.


What you'll need

- A working internet connection
- 802.3af Power over Ethernet (PoE) switch, or a PoE injector. For operation below -20° C, use 802.3at PoE.
- A smartphone or laptop
- A #2 Phillips screwdriver or power drill with a #2 Phillips driver bit
- ¼ inch (6.5mm) drill bit for wall anchors
- ⅛ inch (3mm) drill bit for pilot holes
- A Cat5 or Cat6 Ethernet cable with a 5.5-6.4mm outside diameter, no boot or jacket on the RJ45 jack
- 1" hole saw for Cable Sealing Assembly pass through

Please note:

To reduce potential safety issues, only use the PoE adapter provided with the product, a replacement PoE adapter provided by Verkada, or a PoE adapter purchased as an accessory from Verkada.

CM41-E LED Behavior

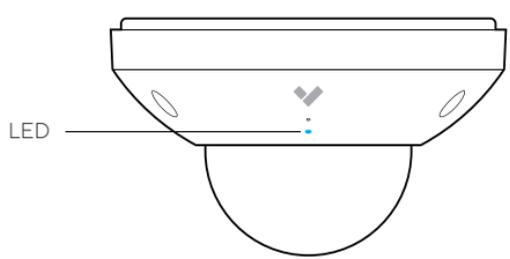


Solid Orange
Camera is on and booting up.

Flashing Orange
Camera is updating firmware.


Flashing Blue
Camera is recording data but cannot reach the server.

Solid Blue
Camera is running, connected, and recording data.

CM41-E Connect

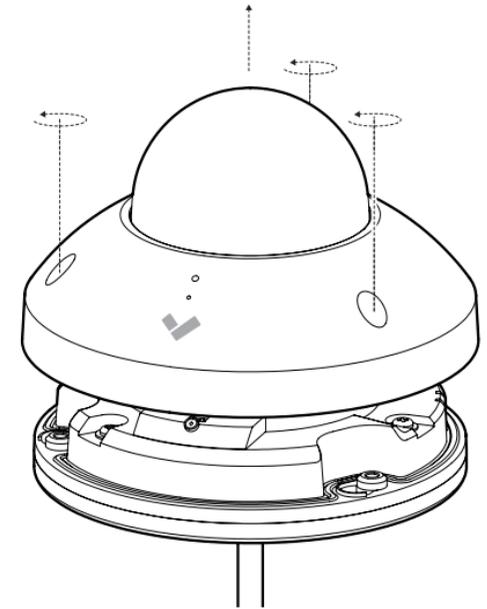

Remove top cover using T10 Security Torx Screwdriver

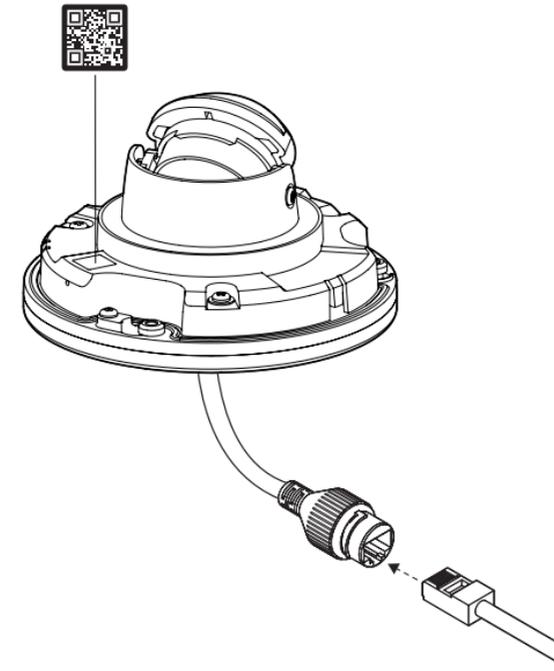

Insert the Ethernet cable into Ethernet port.

Scan the QR code for easy camera registration and setup, or proceed to:

verkada.com/start

Caution

Please note:

- Maintenance and repair work must always be carried out by qualified technical personnel. Disconnect power from the unit when performing a maintenance task.
- Wiring methods used for the connection of the equipment to earth shall be in accordance with the National Electrical Code, ANSI/NFPA 70, and the Canadian Electrical Code, Part 1, CSA C22.1.
- The product must be installed and protected in a location that is not easily accessible and is away from impacts or heavy vibration.
- The camera is only to be connected to PoE networks without routing to outside plants.
- If powered by a power adapter, the adapter should be properly grounded.
- Please contact certified dealers for power adapters.

Support


Thank you for purchasing a Verkada camera.

If for any reason things don't work right or you need assistance, please contact us immediately.

Sincerely,

The Verkada Team


verkada.com/support

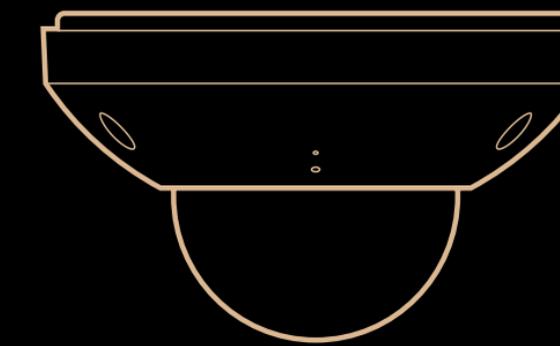



CM41-E Outdoor Mini Dome Camera

CM41-E Mount


Please see "CM41-E Connect" prior to starting this section

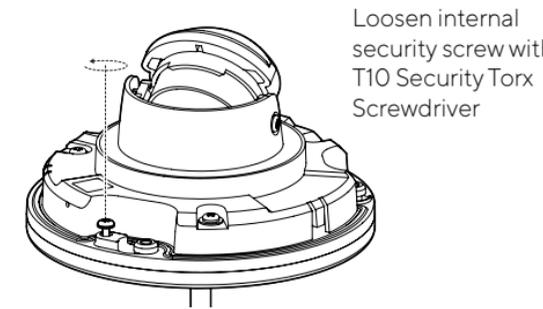


Rotate camera housing counter-clockwise and remove it from mount plate.

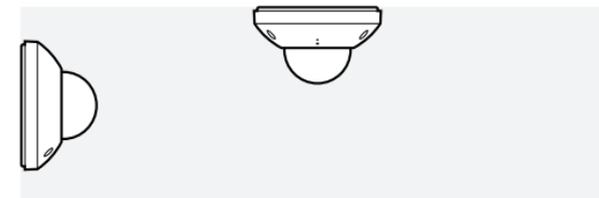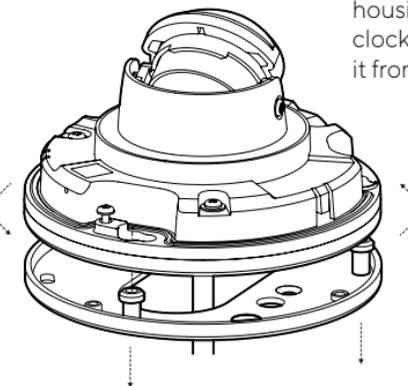


Mount the camera on a wall or ceiling. Try to keep the camera 8 to 10 feet above the ground.

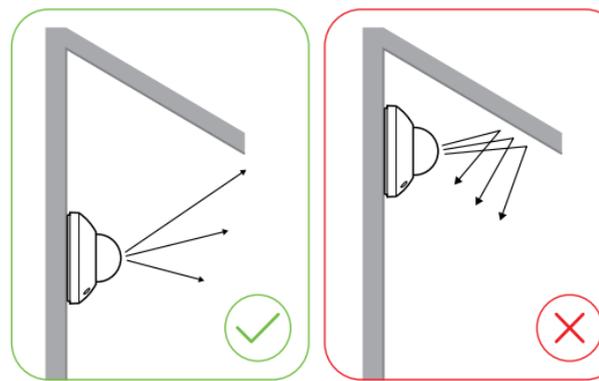


For best night vision, avoid overhangs or obstructions. These may reflect the camera's IR illumination and reduce the image clarity in night mode.

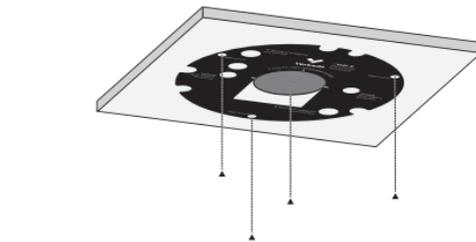


Use the provided mounting template to mark wall mount holes and to drill 1 inch center hole. For other mounting scenarios, use the mounting template to determine the correct hole pattern.

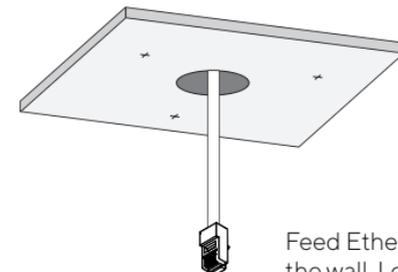


Feed Ethernet cable through the wall. Leave enough slack to make cable-sealing assembly install easier.

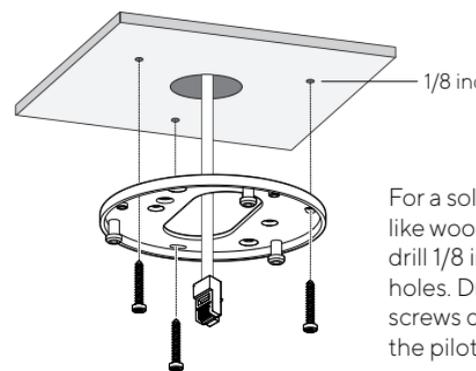


For a solid material like wood or metal, drill 1/8 inch pilot holes. Drive mounting screws directly into the pilot holes.

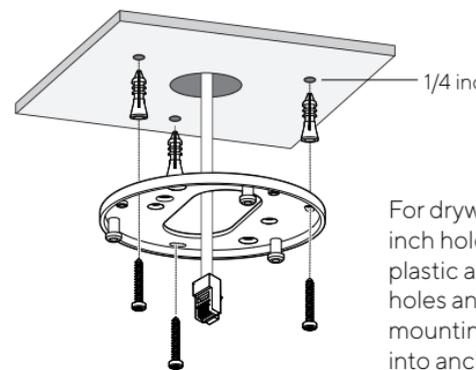


For drywall, drill 1/4 inch holes. Insert plastic anchors into holes and drive mounting screws into anchors.

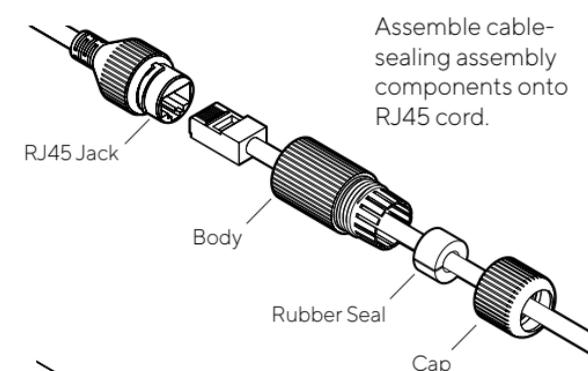



Assemble cable-sealing assembly components onto RJ45 cord.

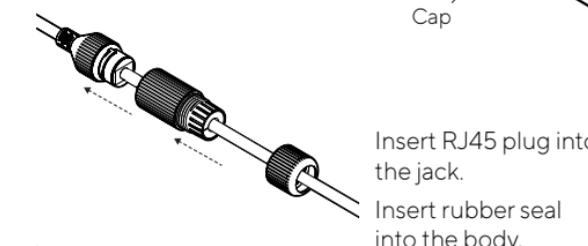


Insert RJ45 plug into the jack. Insert rubber seal into the body.

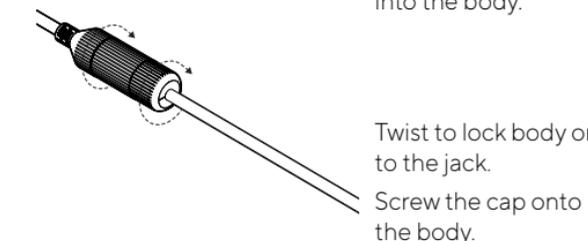

Twist to lock body on to the jack. Screw the cap onto the body.

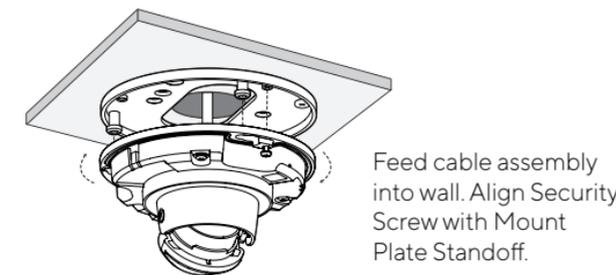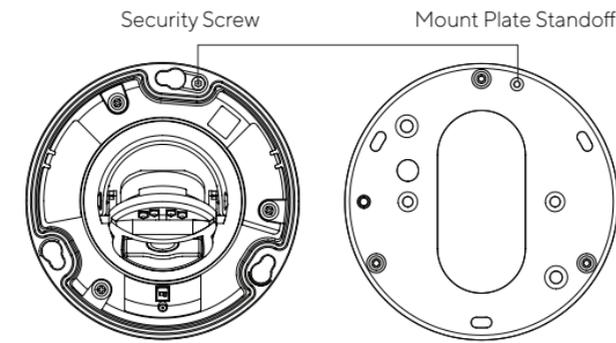


Feed cable assembly into wall. Align Security Screw with Mount Plate Standoff.

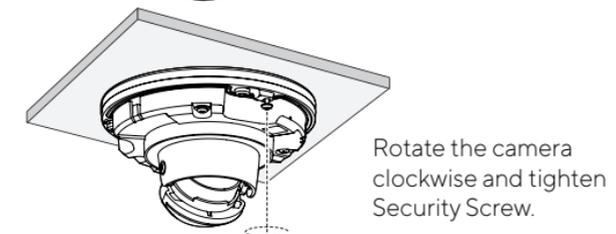


Rotate the camera clockwise and tighten Security Screw.


CM41-E Adjust

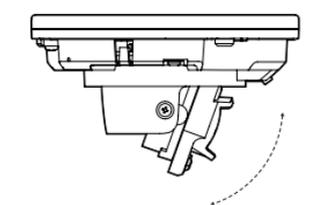

70°

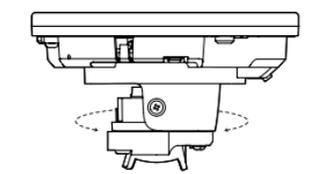


35°

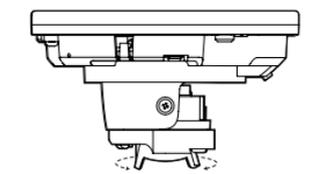


120°

Adjust your camera to the desired viewing angle. Use the online stream to confirm image orientation. Image can be flipped 90 or 180 degrees online in Command.

CM41-E Secure

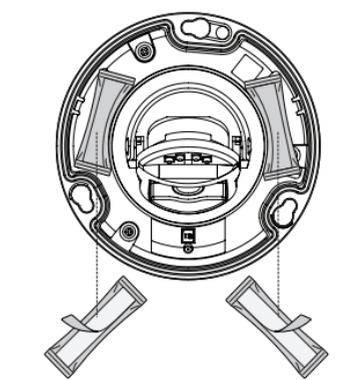

Remove film from the desiccant pack adhesive strips. Apply the adhesive side of both desiccant packs to the recesses that say "Center desiccant here." Ensure that no part of the desiccant pack extends beyond the camera body.

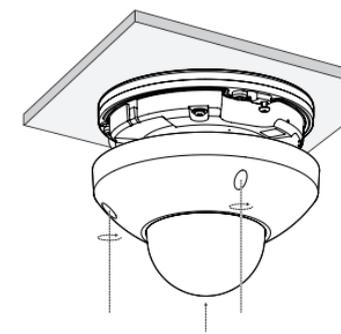

To secure the camera, align the top cover security holes with the mount plate and place the top cover back into its original position. Tighten the security screws using the provided screwdriver.