



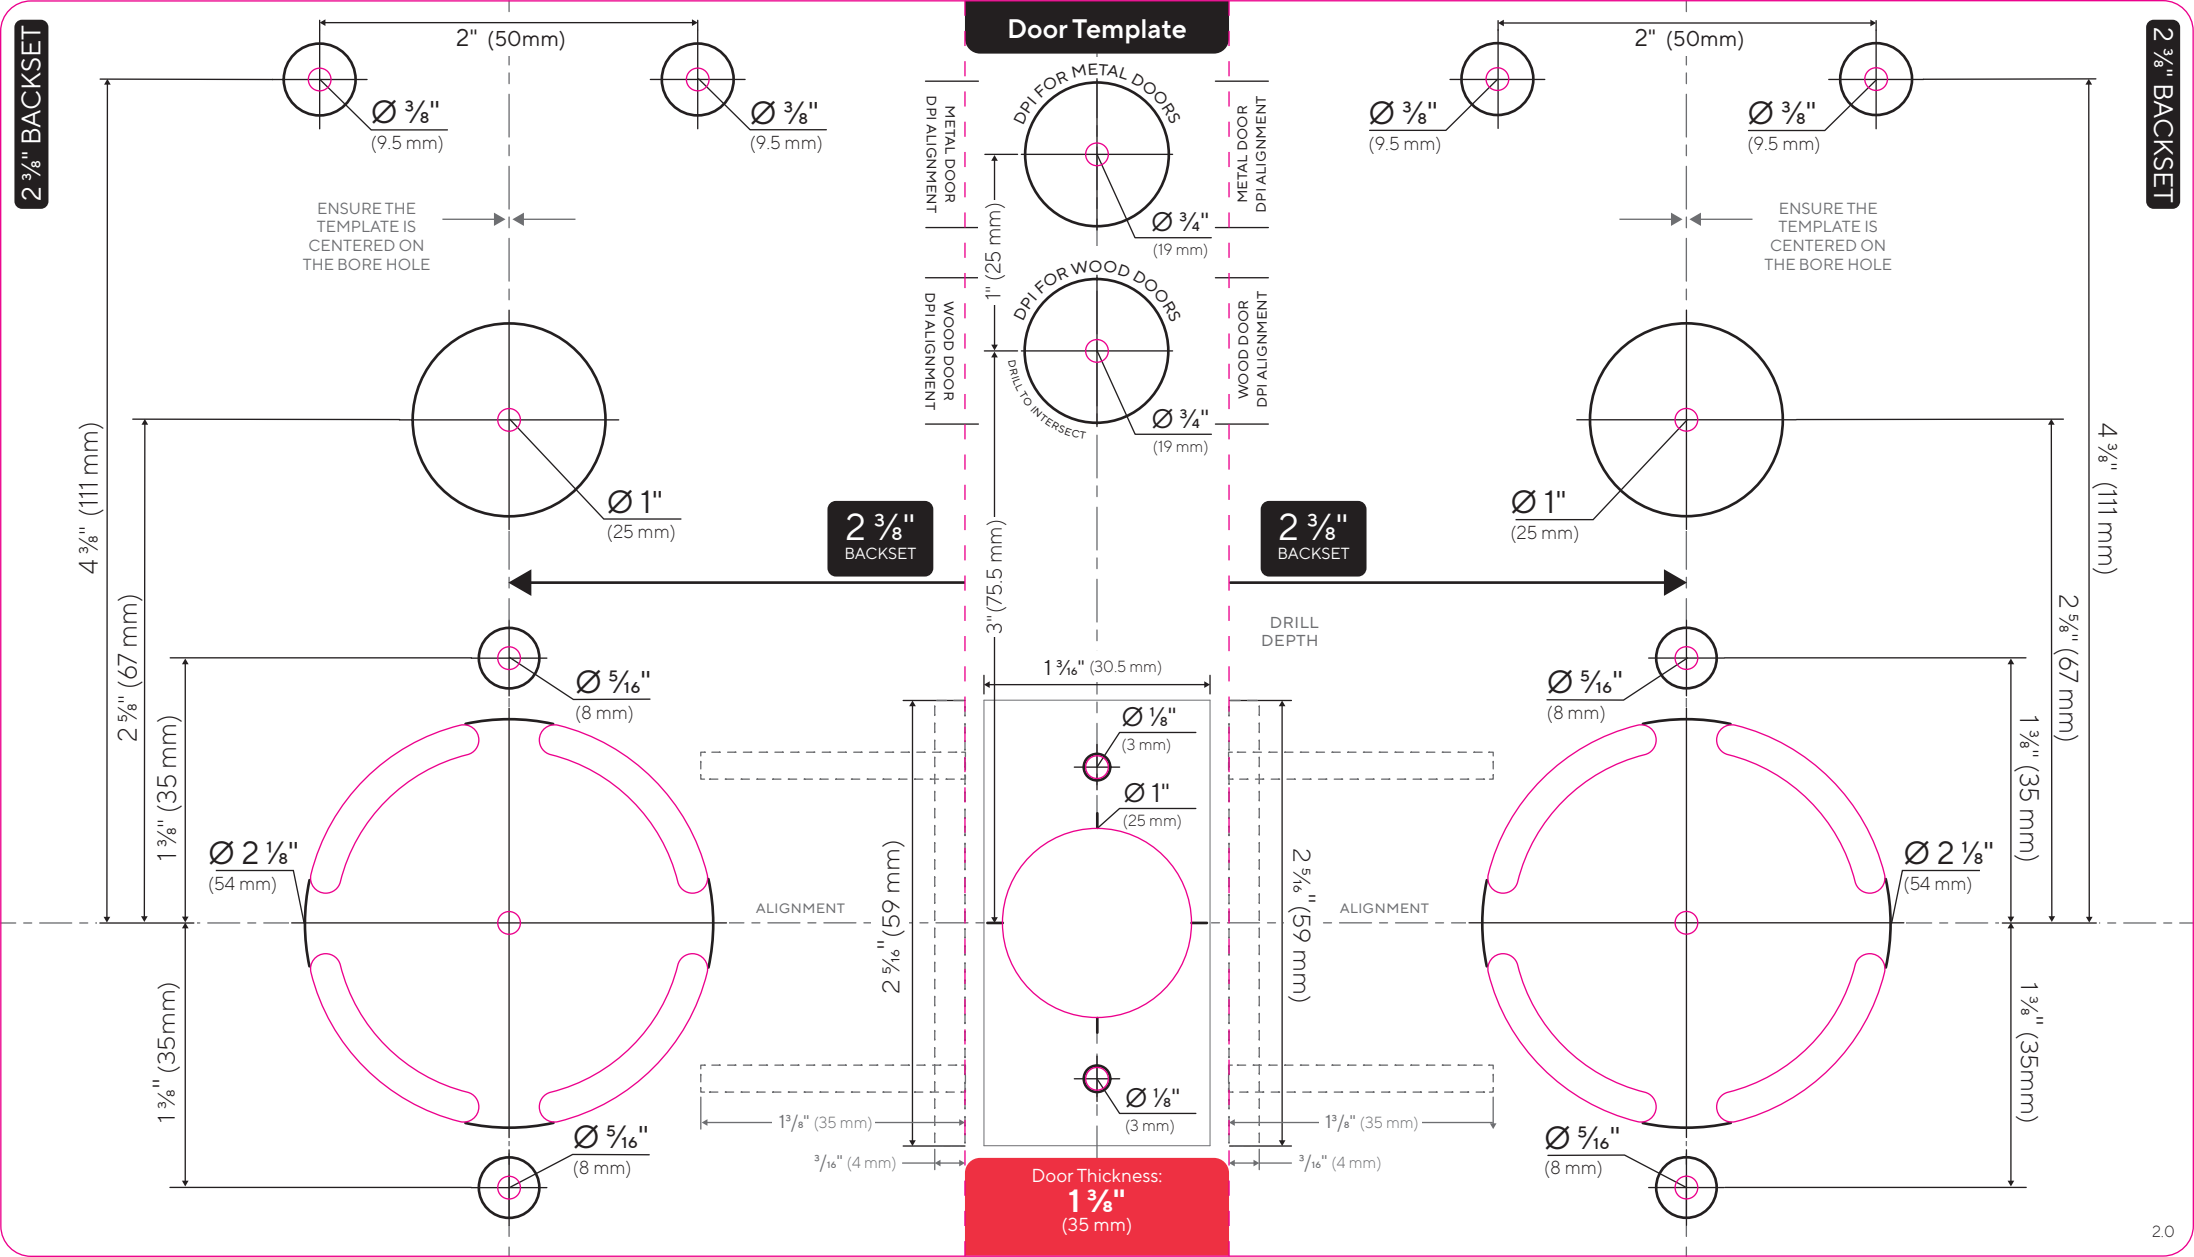


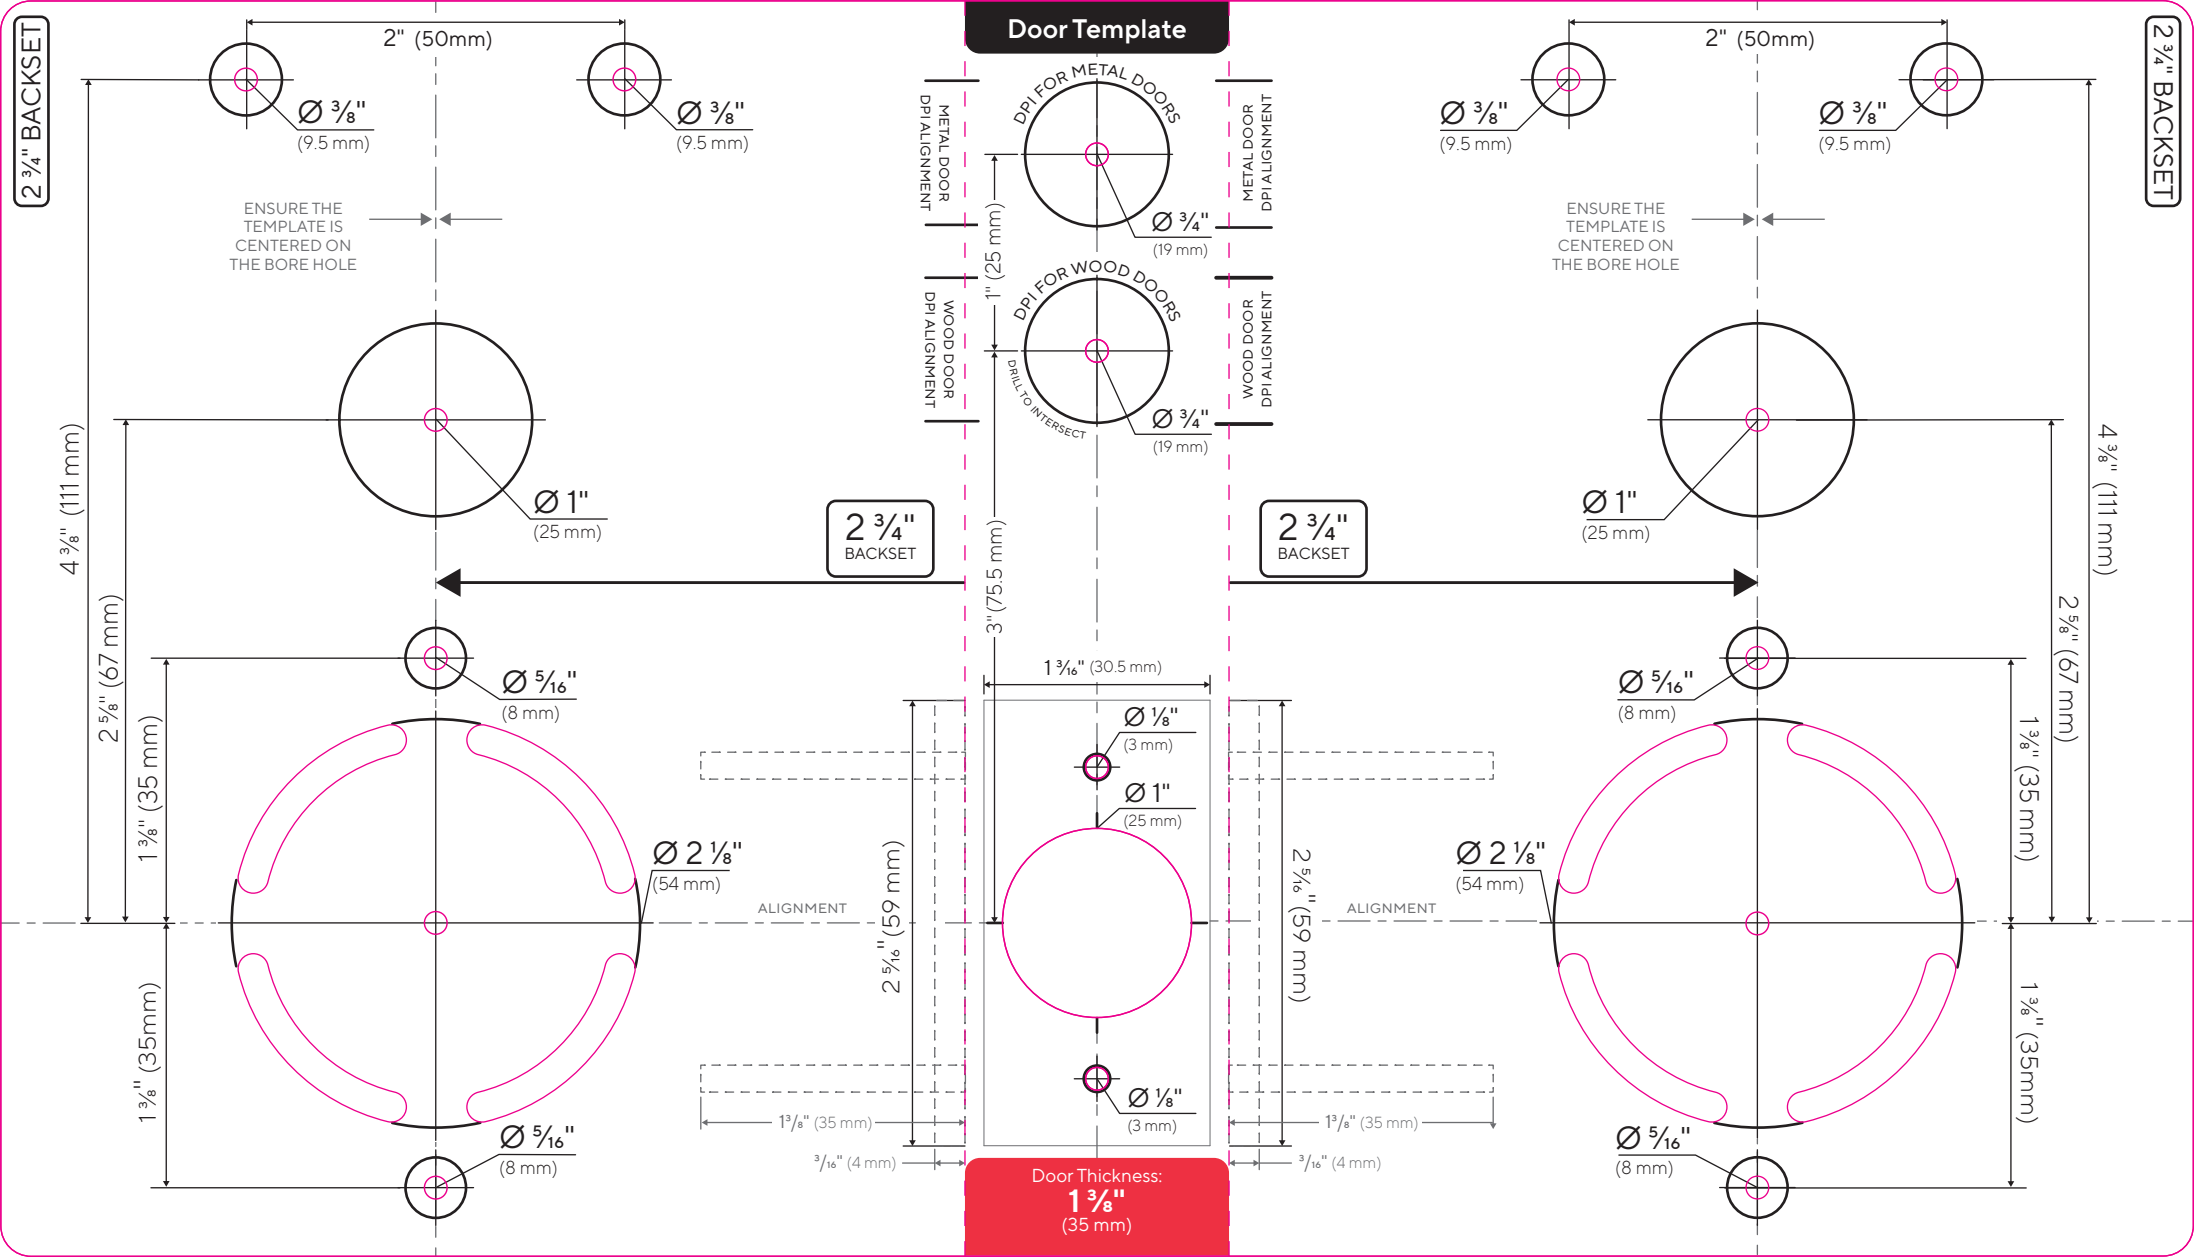


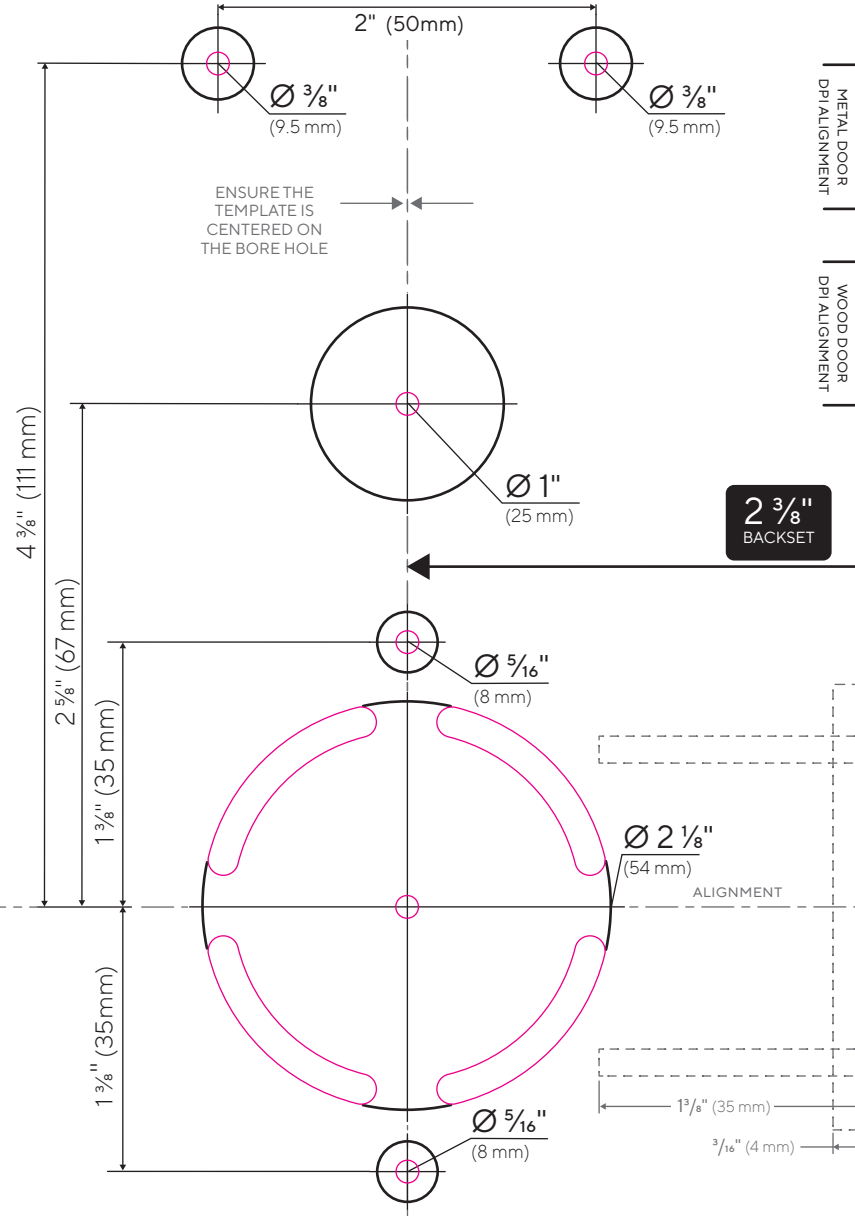


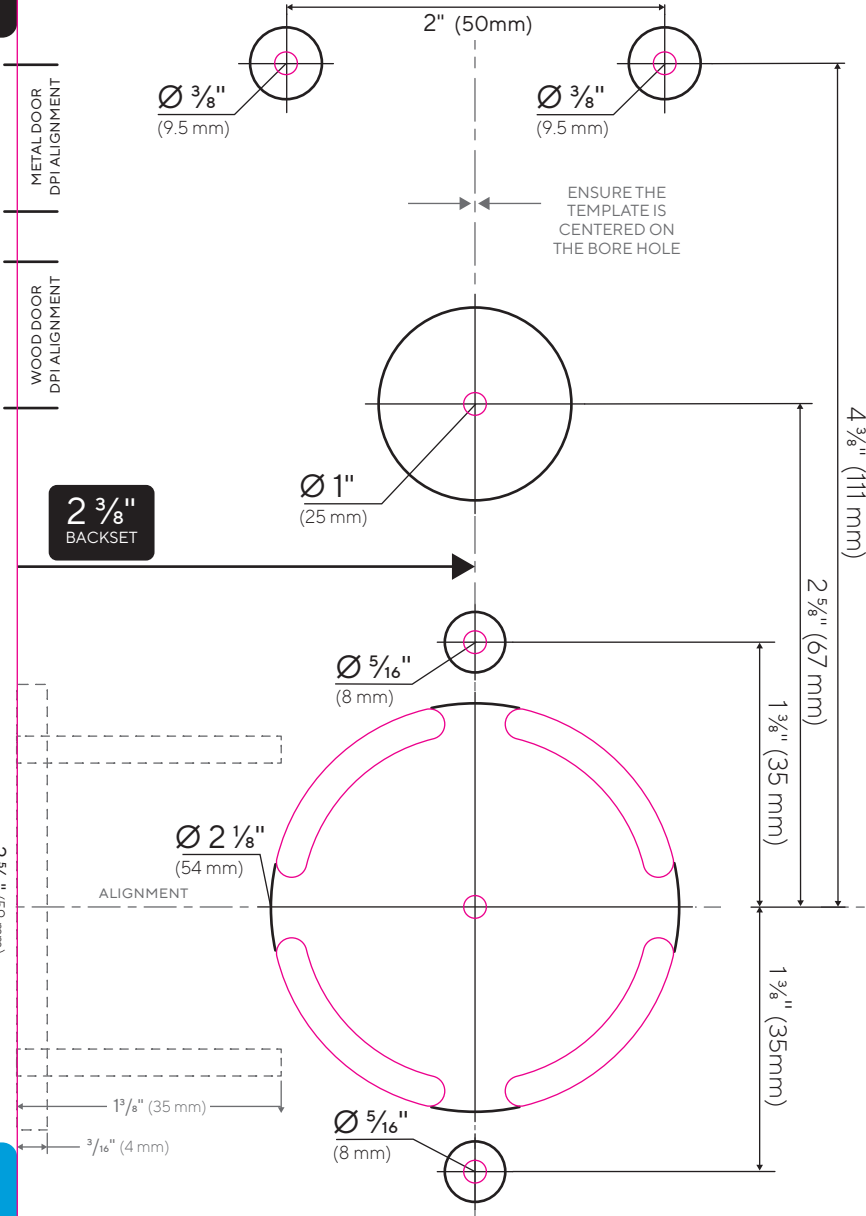


Door Template

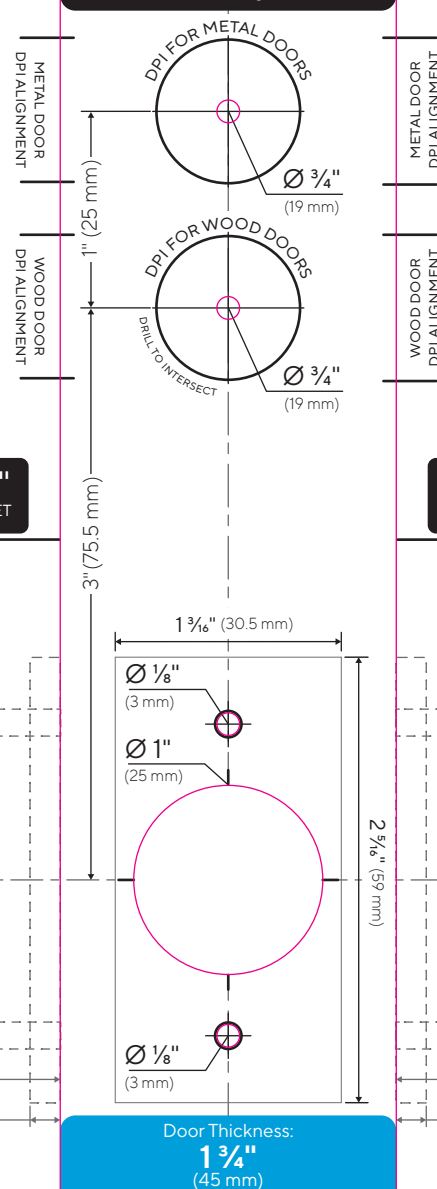

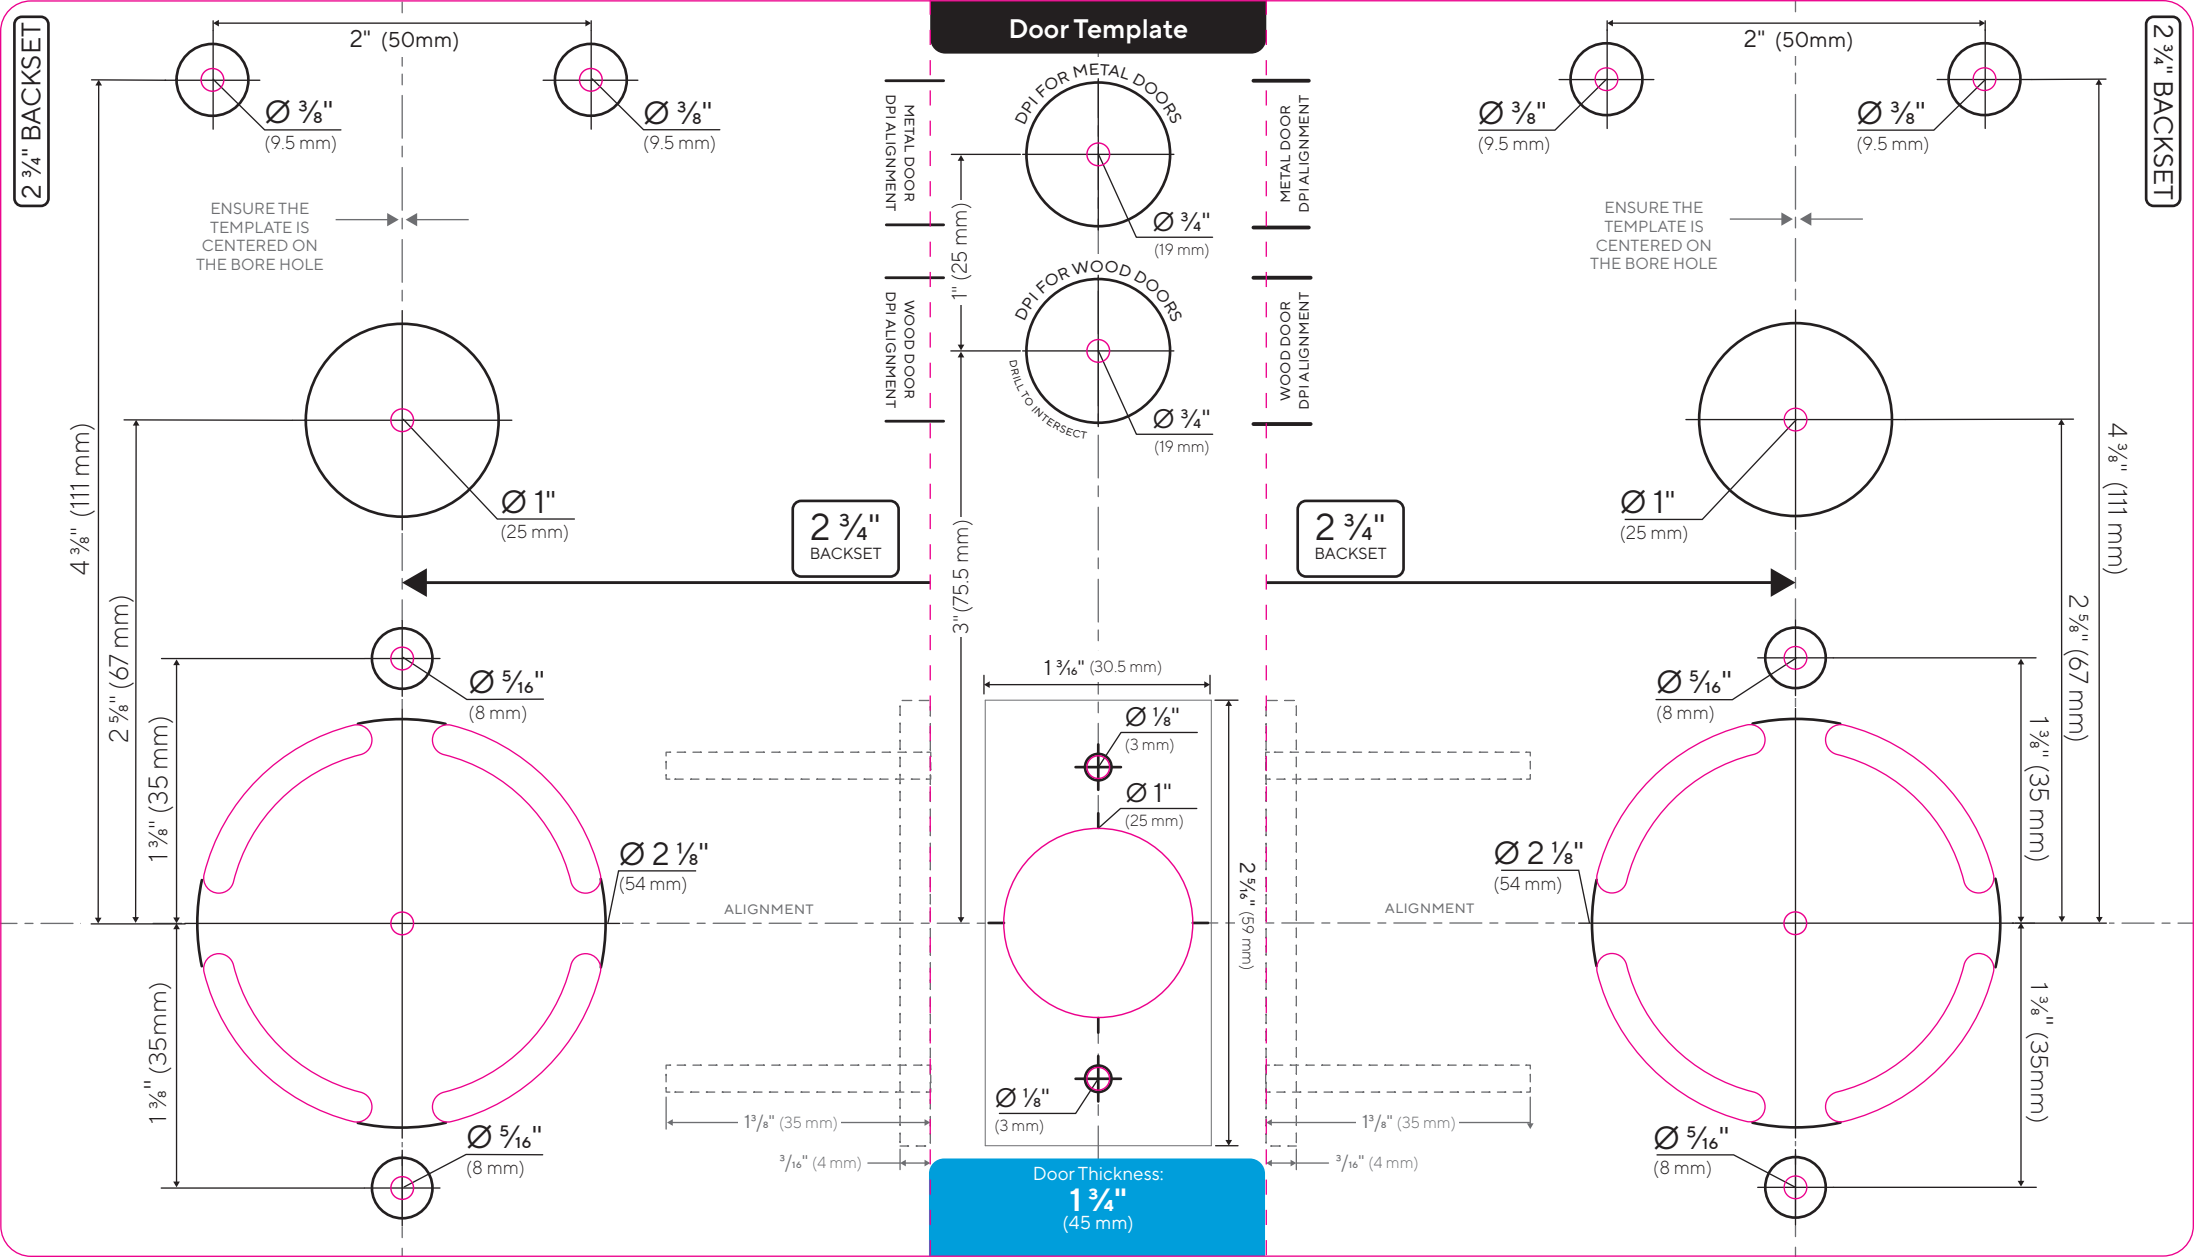


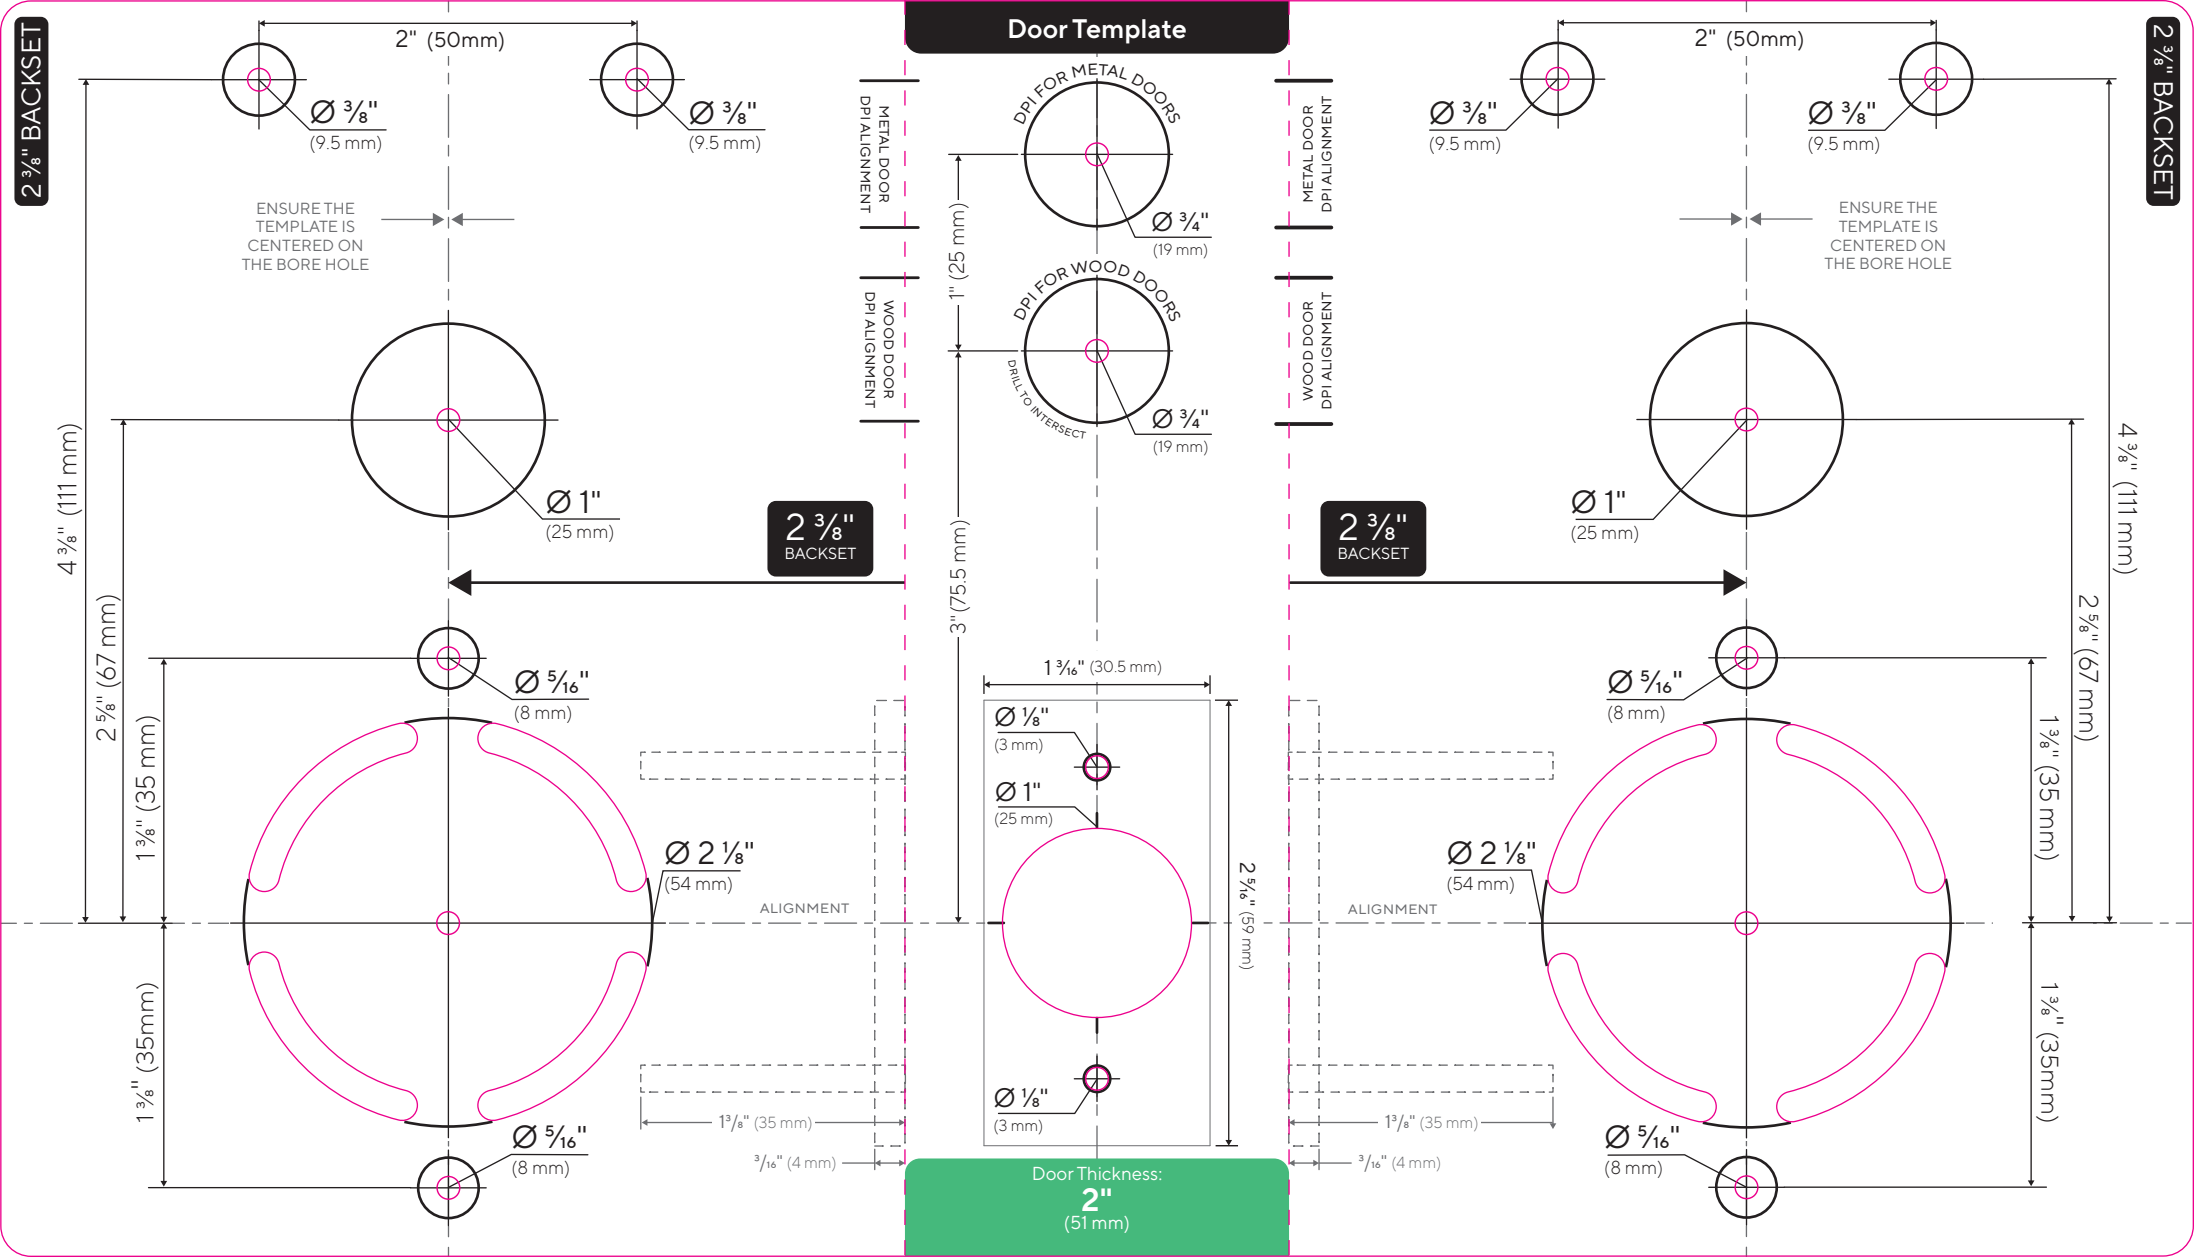

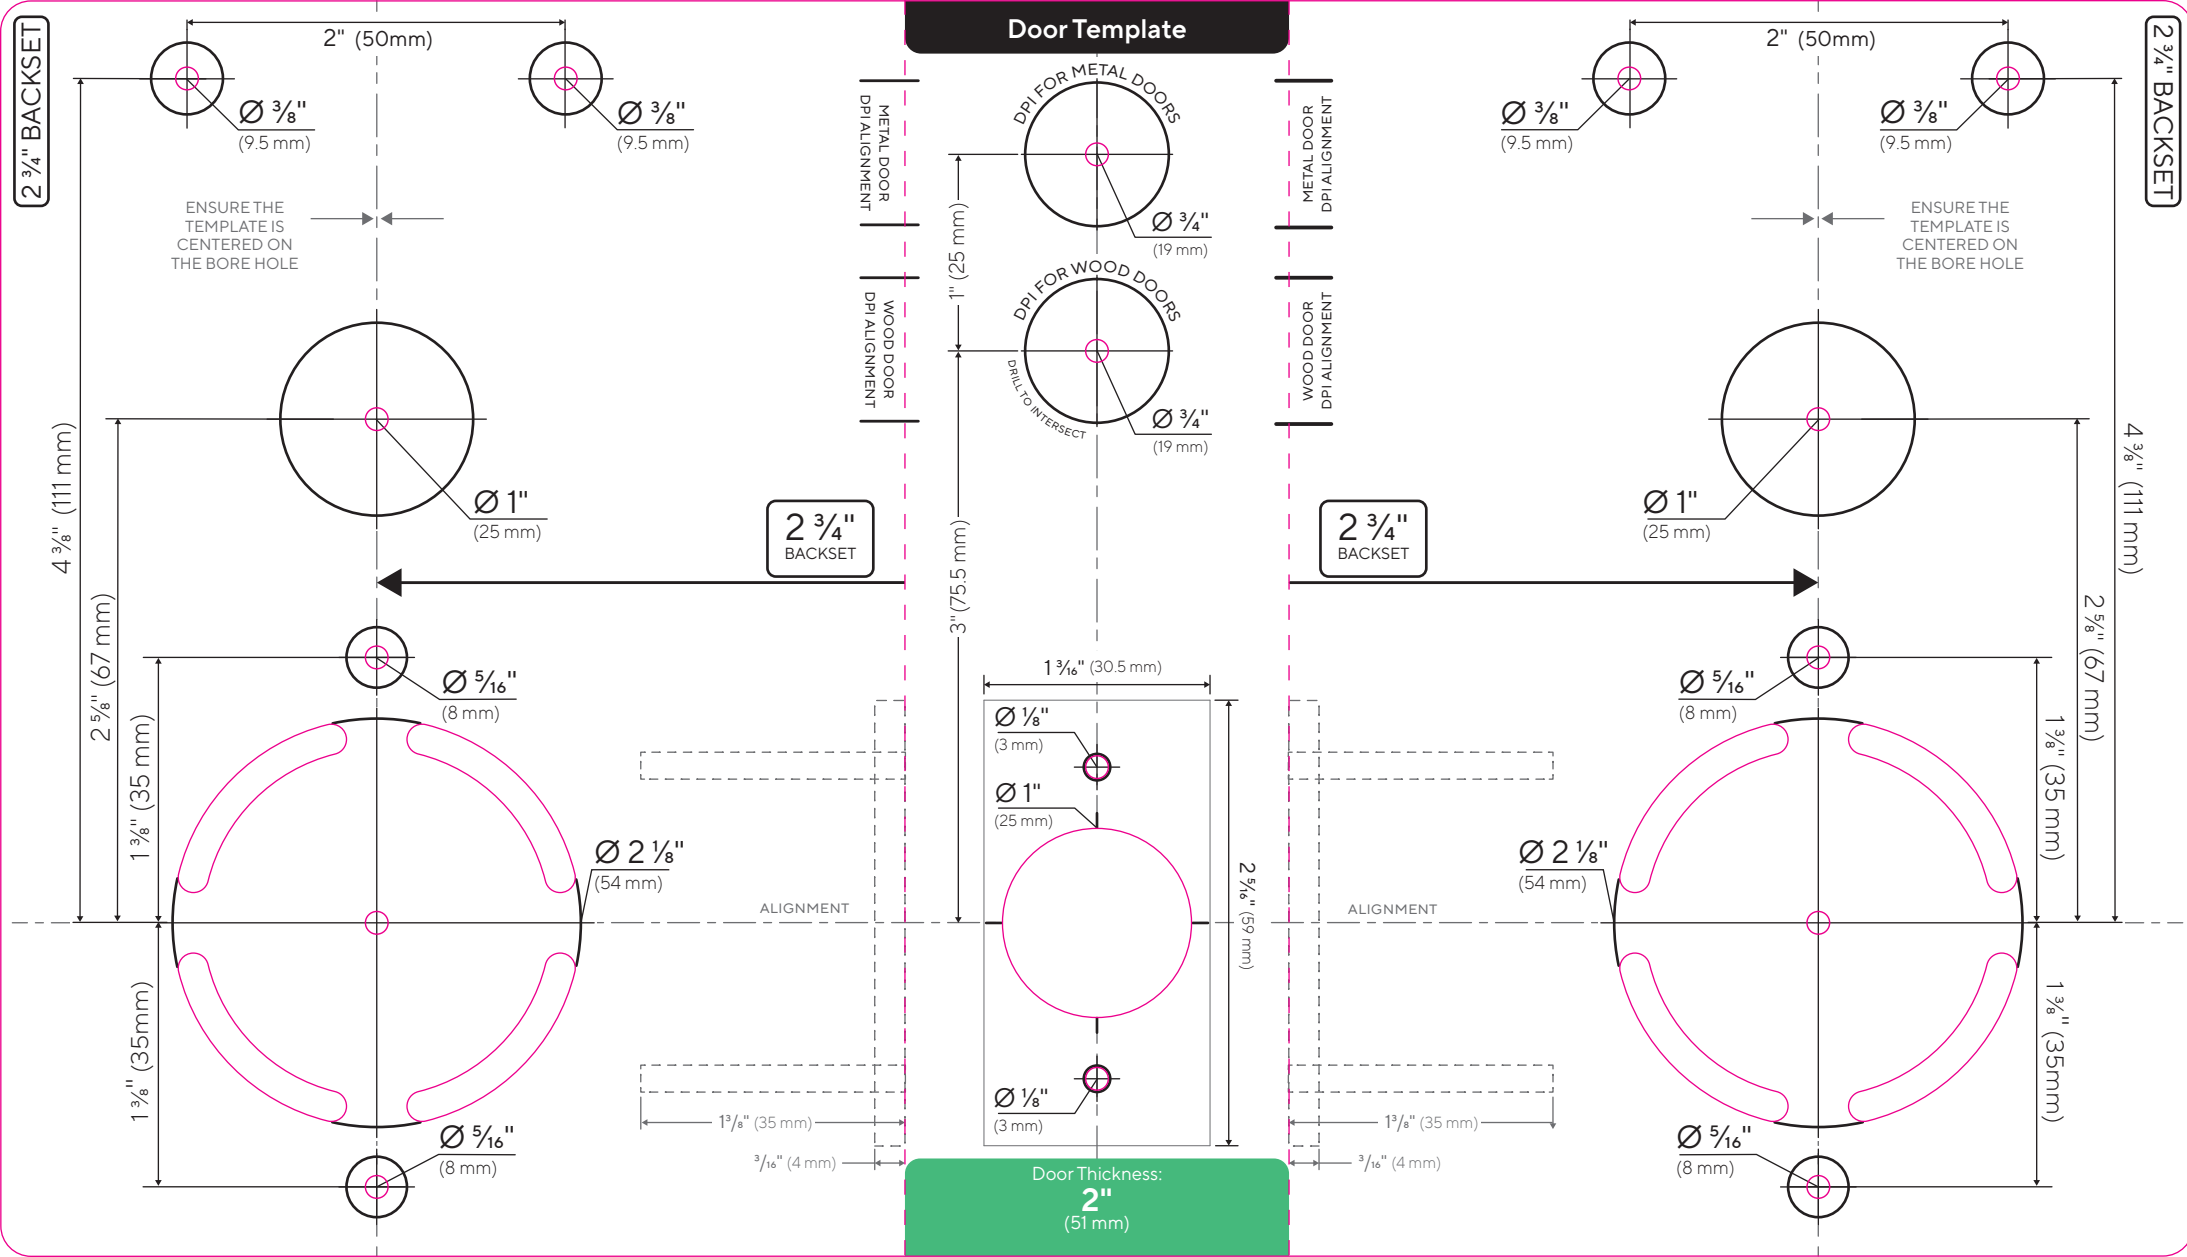

How to use the Templates

- ① Measure the door thickness and backset distance.
- ② Select the appropriate Door Template and wrap it around the door edge. Secure it with tape.
- ③ Carefully separate the Door Frame Template (right) from this sheet.
- ④ Align the top of the Door Template to the black line on the Door Frame Template as shown in the illustration below. Secure with tape.
- ⑤ Mark the holes and remove the templates.
- ⑥ Drill holes with the appropriate drill bit. Do not drill through the templates.

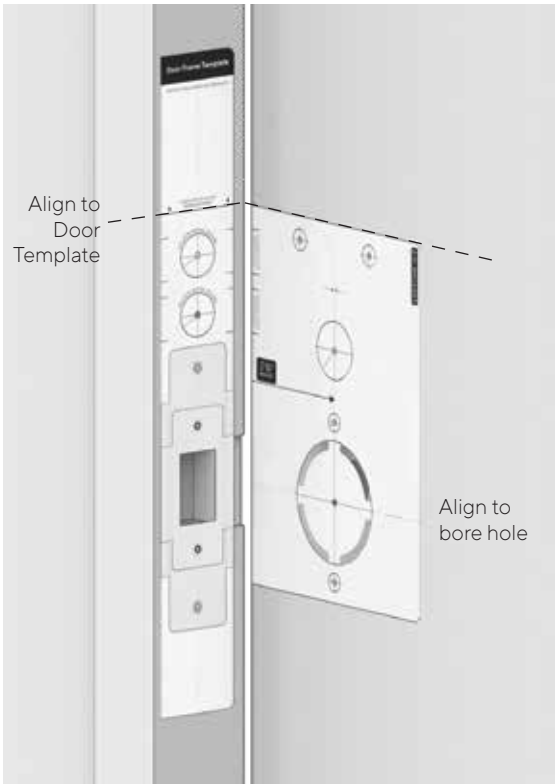

Align the top of the Door Template to the black line on the Door Frame Template.

